



# HR 26 SWITCHES



HR 140  
TOYOTA



HR 141  
TOYOTA



HR 142  
NISSAN



HR 143  
MITSUBISHI



HR 144  
KOMATSU



HR 145  
TCM



## HR 27 SWITCHES



HR 146  
STARTER SWITCH TOYOTA



HR 147  
SWITCH STOP TOYOTA – UNIVERSAL



HR 148  
OIL PRESURE SENSOR



HR 149  
WATER TEMPERATURE SENSOR



HR 150  
FORKLIFT COMBINATION SWITCH