

## HR 40 BEARING





HR 226 NEEDLE BEARING



HR 227 YOKE BEARING



HR 228 HUB BEARING



HR 229 THRUST BEARING



HR 230 CLUTCH TRUST BEARING



HR 231 ENGINE BEARING



## HR 41 BEARING





HR 232 MAST BEARING



HR 233 LIFT CHAIN BEARING